

**MOUNTING
TEMPLATE**

 
Drilling point



213 mm



Drilling point



EN

GUARANTEE CARD FOR SURGE PROTECTOR OPTIMA

S

Sales date, signature and stamp of seller

EN

GUARANTEE CONDITIONS

1. The EVER company gives guarantee for OPTIMA surge protector for a period of 72 months from date of sale.
2. Correctly filled guarantee card or proof of purchase is a precondition for the execution of guarantee repair.
3. The warranty does not cover damage caused by the user as a result of improper use, including the effects of interference in the structure of the strip of unauthorized persons, flooded with liquid, and any thermal and mechanical damage.
4. Own repairs, detaching the case or any other attempts of interference into the product will render the guarantee expired.
5. Guarantees details available at www.ever.eu.
6. Service address available at www.ever.eu.

Appliances connected to the EVER surge protector are covered by insurance. Details available at www.ever.eu.

END OF THE WARRANTY CARD

Cut off and keep



EN

USER MANUAL FOR OPTIMA SURGE PROTECTOR

For correct operation, the device should be connected to a power outlet with the earthing pin. The device should be used indoors, where the electric installation utilises unambiguously identified wires: phase and neutral.

The pin grid array of the power socket should look like figure 1:

- To connect the protective strip EVER and receivers to supply the following:
- to connect the outlet plug of the surge protector to the power outlet,
 - to plug in the outlet plugs of the protected devices to the power outlets on the surge protector,
 - to switch on the power switch (according to the description of construction and functionality of the strip).

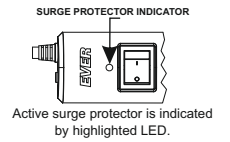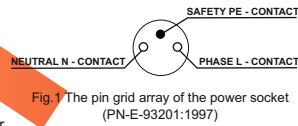

OPERATION GUIDELINES

- In the absence of tension in the slots (no backlight) terminal, check the presence of voltage in the socket outlet that the product is connected. For repair information see www.ever.eu.
- The power strip should only be used in systems with safety contact (earthing pins)!
- Taking into consideration the type and fuse location, the safety systems applied in the building system are used as one of the security measures.
- Depending on the type of ground to which surge protector will be fixed (concrete, brick, plasterboard), use the appropriate set of pins with screws dedicated to this type of ground. Installation should be carried out in accordance with the attached fixing template.

NOTE! The surge protector is fully disconnected from the power network by unplugging the power lead plug from the socket, which should be easily accessible and located close to the device.

NOTE! Product is designed for indoor use. Protect the device from humidity.

PARAMETERS \ NAME	OPTIMA		
	OPTIMA 1,5 m	OPTIMA 3,0 m	OPTIMA 5,0 m
Part number	T/LZ08-OPT015/0000	T/LZ08-OPT030/0000	T/LZ08-OPT050/0000
Type	Surge protector		
Rated voltage and frequency	~ 250 V / 50 Hz		
Maximum current (total)	10 A		
Single outlet maximum load	10 A		
Number and type of power outlets	6; in accordance with NF C 61-314; System Child Protection		
Circuit breaker	1 x automatic fuse 10 A		
Type of surge protection	SPD type 3		
Protected lines	L - N		
Energy absorption (total)	175 J		
Test voltage U _{OC} (L-N)	6 kV		
Voltage protection level U _{P(L-N)}	1,3 kV		
Continuous operating voltage U _c	~ 275 V		
Impulse discharge current I _{MAX} (L-N)	6 kA		
Indicators	1x LED (surge protector indicator)		
Plug	NF C 61-314		
Power switch	2-pole lighted		
Dimensions [W x D x H]	53 x 359 x 39 mm		
Power cord length	1,5 m	3 m	5 m
Net weight	412 g	546 g	724 g



Appropriate utilisation of used up electric and electronic equipment helps to avoid consequences resulting from the presence of dangerous materials, as well as inappropriate disposal and processing of such equipment, which may be hazardous to human life and the environment. (Act dated 29 July 2005 on used up electric and electronic equipment, article 22.1 items 1 and 2.)

According to the regulations binding in the European Union, a crossed rubbish bin symbol means that when a product is no longer used it should be disposed of at a special waste pickup site. This concerns the device itself, as well as other accessories marked with this symbol. Do not dispose of those products together with unsorted household waste.