

# Infrared Cameras, Infra-red Thermometers Quick Start Guide

## 1. Introduction


Dear Customer! Thank you for your purchase in TME! To protect the environment we have prepared for you this quick start guide. Before operating the unit, please read it carefully. Please visit [www.tme.eu](http://www.tme.eu)

Illustrations in this manual are only example images and may differ from the actual item. It does not change their main characteristics.

## 2. Application

This device is designed for recording and monitoring of temperature.

## 3. Unit setup and operation

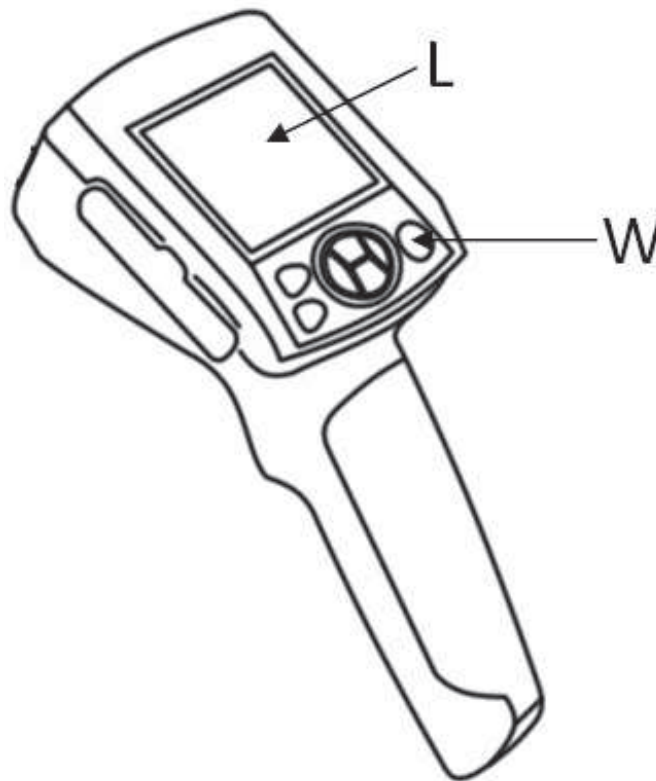

W - Power on switch

L - Display

- Turn on the power using the appropriate button.
- Press the appropriate button to perform the measurement.
- Watch the display of the device to read the measurement data.
- To replace the battery open the battery cover by unscrewing the screws or loosening the lock, replace the battery, close the cover.



**Transfer Multisort Elektronik Sp. z o.o.**

ul. Ustronna 41, 93-350 Łódź, Poland, correspondence address: 90-951 Łódź 40, PO BOX 2071  
tel. +48 42 645 54 44, fax +48 42 645 54 70, [export@tme.eu](mailto:export@tme.eu), [www.tme.eu](http://www.tme.eu)

VAT ID: PL7290108984, REGON (NACE): 473171710, District Court for Łódź-Śródmieście, NCR: 0000165815, initial capital: 3 300 000 PLN

## 4. Precautions

- Do not use the device if it is damaged. Before using the device, inspect the housing. Check if it has no cracks or broken off pieces. Carefully check the insulation surrounding the connectors.
- Make sure the battery cover is closed and latched before operating the unit.
- Do not use the device if it works incorrectly. Protection may be impaired. If you are unsure whether the device is working correctly, take it to the service.
- Replace the battery with a new one or charge the battery if the display shows the battery low indicator.
- When servicing the unit, use only spare parts specified by the manufacturer.
- Never use the device in explosive environments, if it is not designed to work in such conditions.
- Be careful when measuring temperature - there is a risk of burns.
- Do not exceed the measurement range due to the risk of damage to the detector.
- Do not aim the laser in the eyes direction.



Electronic Components

### Transfer Multisort Elektronik Sp. z o.o.

ul. Ustronna 41, 93-350 Łódź, Poland, correspondence address: 90-951 Łódź 40, PO BOX 2071  
tel. +48 42 645 54 44, fax +48 42 645 54 70, export@tme.eu, www.tme.eu

VAT ID: PL7290108984, REGON (NACE): 473171710, District Court for Łódź-Śródmieście, NCR: 0000165815, Initial capital: 3 300 000 PLN