

Autonics

Single-Phase Slim Power Controllers SPR1 Series

INSTRUCTION MANUAL



Thank you for choosing our Autonics product.
Please read the following safety considerations before use.

■ Safety Considerations

※Please observe all safety considerations for safe and proper product operation to avoid hazards.
※⚠ symbol represents caution due to special circumstances in which hazards may occur.

- Warning** Failure to follow these instructions may result in serious injury or death.
- Caution** Failure to follow these instructions may result in personal injury or product damage.


⚠ Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- Install on the device panel, and ground to the bolt for grounding separately.**
Failure to follow this instruction may result in fire or electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire or electric shock.
- Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.

⚠ Caution

- Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.
- Since leakage current still flows right after turning off the power or in the output OFF status, do not touch the load terminal.**
Failure to follow this instruction may result in electric shock.

■ Ordering Information

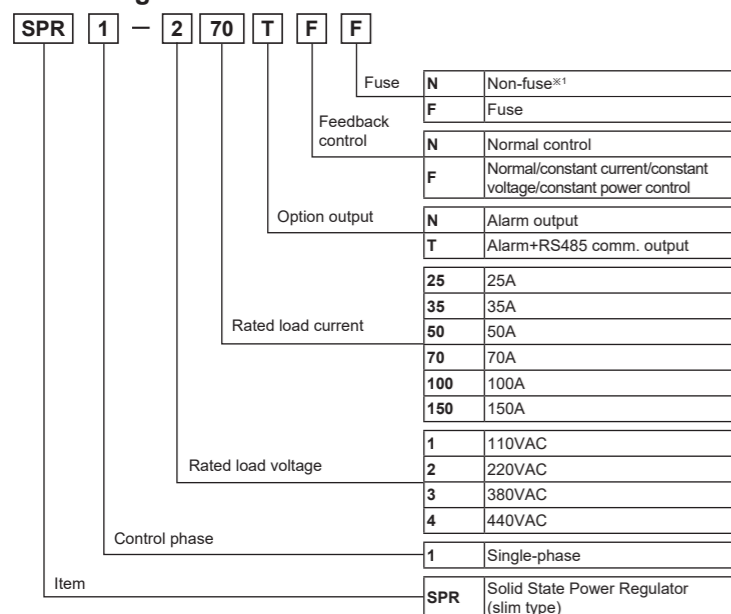

※1: Product is not equipped with a rapid fuse inside. Install the suitable fuse for rated load current of the model separately.
(The performance of the product is guaranteed only when using the fuse provided by us.)

※The above specifications are subject to change and some models may be discontinued without notice.


※Be sure to follow cautions written in the instruction manual, user manual, and the technical descriptions (catalog, homepage).

■ Specifications

Model	SPR1-1	SPR1-2	SPR1-3	SPR1-4
Control phase	Single-phase			
Rated load voltage (50/60Hz)	110VAC~	220VAC~	380VAC~	440VAC~
Power supply	100-240VAC~ 50/60Hz			
Min. load current	1A			
Permissible voltage range	90 to 110% of rated voltage			
Power consumption	<ul style="list-style-type: none"> Rated load current 25A/35A/50A: max. 7VA Rated load current 70A/100A/150A: max. 12VA 			
Display method	3-digit 7-segment LED			
Indicator	<ul style="list-style-type: none"> Operation indicator/Manual control indicator: green LED Alarm indicator/output indicator/unit (V, A) indicator: red LED 			
Control method	<ul style="list-style-type: none"> Phase control: normal control mode, constant current/constant voltage/constant power feedback control mode Cycle control: fixed cycle control mode, variable cycle control mode ON/OFF control 			
Applied load	<ul style="list-style-type: none"> Phase control: ON/OFF control: resistance load, inductive load Cycle control: resistance load 			
Control input	<ul style="list-style-type: none"> Auto control: DC4-20mA, 1-5VDC, ON/OFF contact (no-voltage input), pulse voltage (5-12VDC=) Manual control: outside adjuster (10kΩ), inside adjuster (output limit) 			
Digital input (DI)	RUN/STOP switching, AUTO/MAN switching, RESET			
Output	Alarm	250VAC~ 3A, 30VDC= 3A, 1c resistive load		
	Communication	RS485 communication output (Modbus RTU method), max. connection: 31 units		
Output range	<ul style="list-style-type: none"> Phase control: 0 to 98% • Cycle control: 0 to 100% • ON/OFF control: 0%, 100% 			
Output accuracy	<ul style="list-style-type: none"> Normal control: within ±10% F.S. of rated load voltage Constant current feedback control: within ±3% F.S. of rated load current Constant voltage feedback control: within ±3% F.S. of rated load voltage Constant power feedback control: within ±3% F.S. of rated load power 			
Set method	By front keys, by communication			
Functions	Alarm	SCR error alarm, overcurrent alarm, heatsink overheat alarm, overvoltage alarm, fuse break alarm, frequency error alarm, heater break alarm		
Cooling method	<ul style="list-style-type: none"> Rated load current 25A/35A/50A: natural cooling Rated load current 70A/100A/150A: forced air cooling (with the cooling fan) 			
Insulation resistance	Over 200MΩ (at 500VDC megger)			
Dielectric strength	2,000VAC 50/60Hz for 1 min (between input terminals and power terminals)			
Output leakage current	Max. 10mA			
Noise immunity	±2kV the square wave noise (pulse width: 1μs) by the noise simulator			
Memory retention	Approx. 10 years (when using non-volatile semiconductor memory type)			
Vibration	Mechanical	0.75mm amplitude at frequency of 5 to 55Hz in each X, Y, Z direction for 2 hours		
	Malfunction	0.5mm amplitude at frequency of 5 to 55Hz in each X, Y, Z direction for 10 min		
Environment	Ambient temp.	-10 to 55°C, storage: -20 to 80°C		
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH		
Accessory	11-pin connector			
Approval	CE			
Weight*1	<ul style="list-style-type: none"> Rated load current 25A/35A/50A: approx. 1.6kg (approx. 1.3kg) Rated load current 70A: approx. 1.65kg (approx. 1.35kg) Rated load current 100A/150A: approx. 3.2kg (approx. 2.8kg) 			

※1: The weight includes packaging. The weight in parenthesis is for unit only.
※Environment resistance is rated at no freezing or condensation.


■ Dimensions

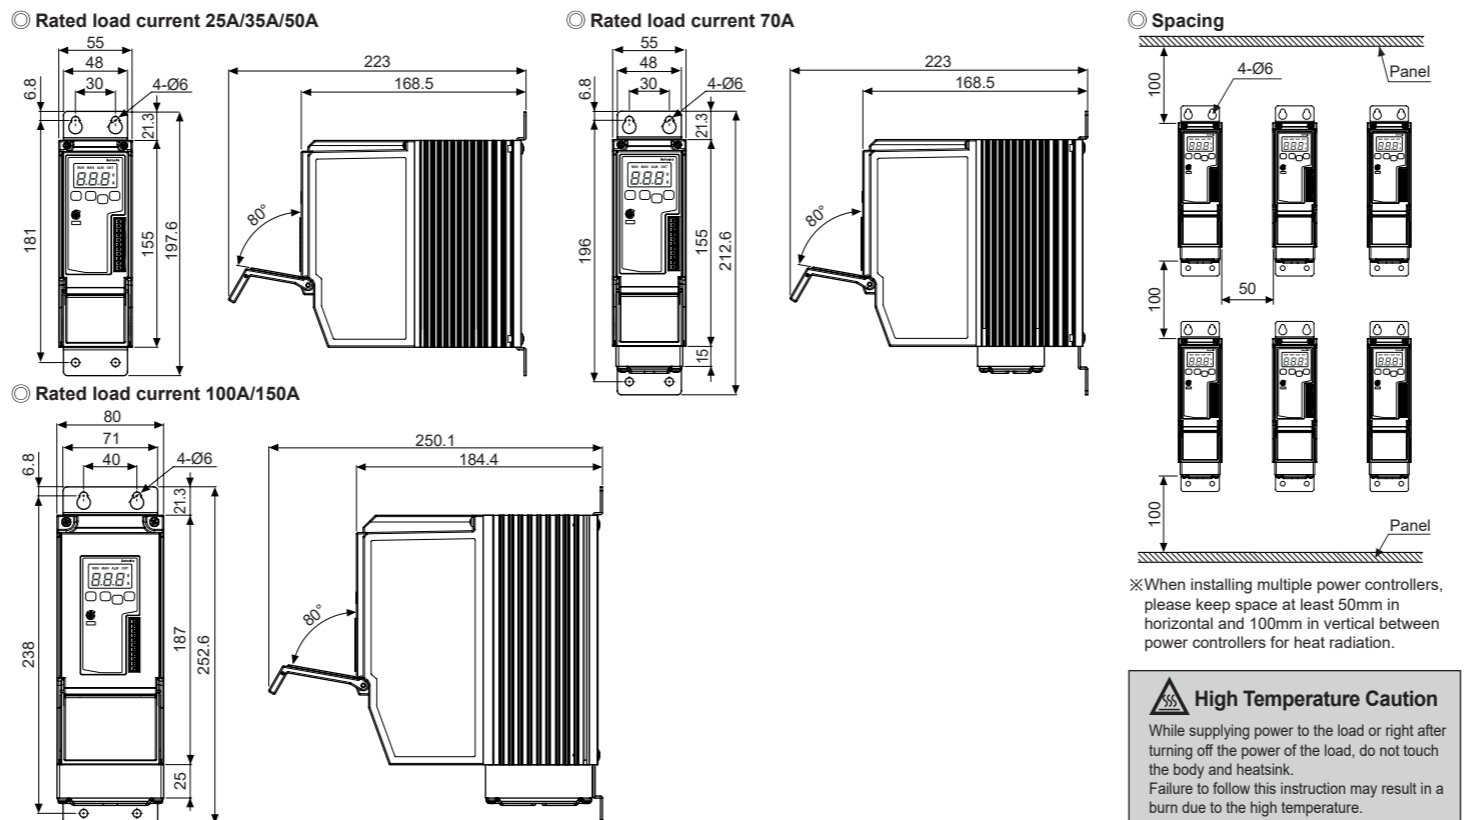

⚠ High Temperature Caution


While supplying power to the load or right after turning off the power of the load, do not touch the body and heatsink.
Failure to follow this instruction may result in a burn due to the high temperature.

■ Unit Description

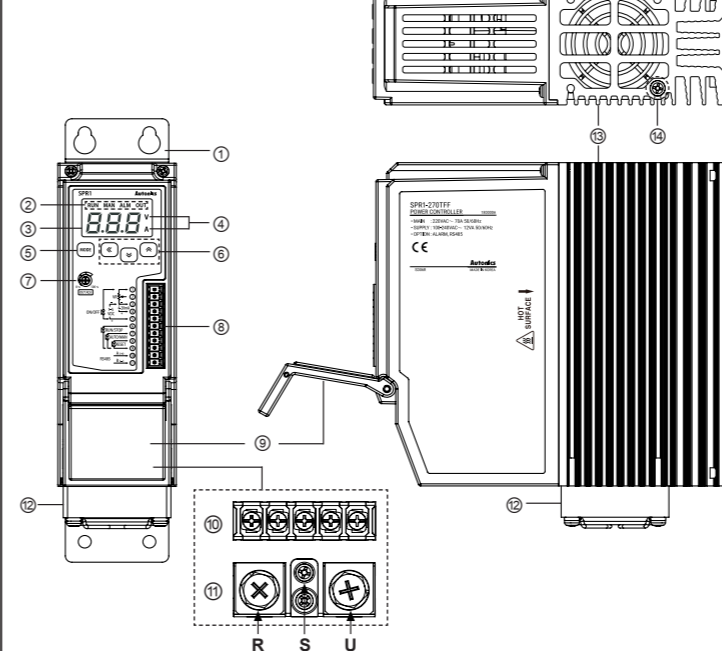

- ① Bracket
 - ② Indicator
 - ③ Display part: Displays settings of the front display [d / 5] parameter in RUN mode, and displays parameter and setting value in setting mode.
 - ④ Unit indicator (Light ON/●: Light OFF)
 - ⑤ Indicator
 - ⑥ Setting value adjustment key: Enters SV setting mode and move digits.
 - ⑦ Output limit adjuster (OUT ADJ): Limits output from 0 to 100%.
 - ⑧ 11-pin connector terminal
 - ⑨ Terminal cover
 - ⑩ Alarm output and power input terminals
 - ⑪ R, S, U load output terminals
 - ⑫ Cooling fan: For models with the rated load current of 70A/100A/150A, a cooling fan is attached.
 - ⑬ Heatsink
 - ⑭ Bolt for grounding (M4)
- | Indicator | Color | Function |
|-----------|-----------|---|
| RUN | Green LED | Turns on in the RUN mode. |
| MAN | Green LED | Turns on when adjusting load output in the manual control mode. |
| ALM | Red LED | Flashes in alarming status. |
| OUT | Red LED | Turns on when load control outputs. |

■ Connections

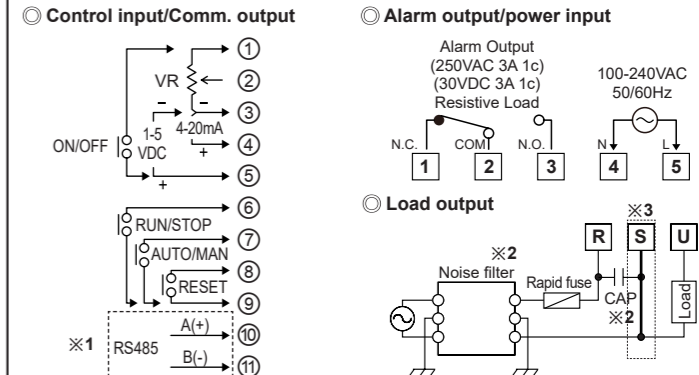

- ※1: This is only for models with RS485 communication output (SPR1-□□□□□□).
- ※2: When connecting noise filter and capacitor, it is appropriate for EMC.
CAP: Rated load voltage 110VAC-220VAC → 1μF/250VAC
: Rated load voltage 380VAC-440VAC → 0.47μF/500VAC
- ※3: The normal control mode does not connect S terminal and CAP for EMC.
- ※Tighten the terminal screw with the below tightening torque.

Rated load current	Specification	Alarm output/power input	Load output	
25A, 35A, 50A, 70A	Screw	M3	S	R, U
100A, 150A	Screw	M3	S	R, U
	Tightening torque	0.5N·m	0.5N·m	5.5 to 6.0N·m
		0.5N·m	0.5N·m	6.5 to 7.0N·m


※Use crimp terminals or terminals of size specified below. (unit: mm)

Terminal type	Terminal number	a	b	c
Input (11-pin)	1 to 11	6 to 7	Max. 1.5	Max. 3.5
Alarm output/power input	S		Min. 3.0	Max. 6.0
Load output	R, U	Rated load current 25A/35A/50A/70A	Min. 6.0	Max. 16.0
		Rated load current 100A/150A	Min. 8.0	Max. 26.0

※Connect the specified wire as the rated load current.

Rated load current	Alarm output/power input	Load output	
25A/35A/50A/70A	AWG 18 to 14	S	R, U
100A/150A	AWG 18 to 14	AWG 13 to 4	AWG 4 to 2/0


■ Removing the Case

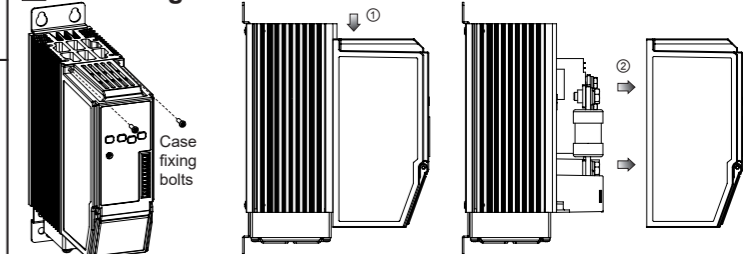

○ Specification of case fixing bolts

Rated load current	Specification of bolts
25A, 35A, 50A, 70A	M3
100A, 150A	M4

■ Replacement of Fuse

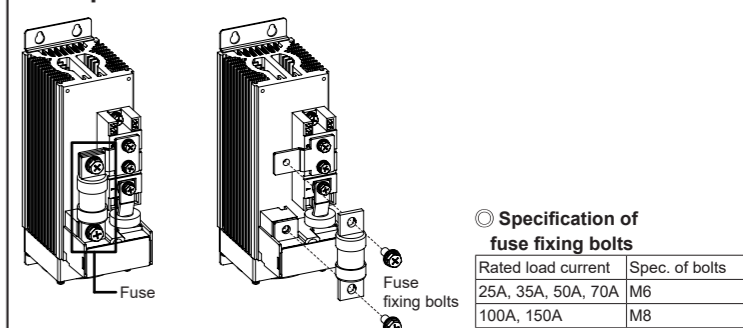

○ Recommended fuse specifications


For replacing the fuse, please use the recommended fuse which has the below specifications. (manufacture: BUSSMANN)

Rated load current	Model	Rated load current	Model	Rated load current	Model
25A	50FE	50A	80ET	100A	FWH-150B
35A	63ET	70A	100FE	150A	FWH-200B

※The performance of the product is guaranteed only when using the fuse provided by us.

Parameter Group

- Hold the **MODE** key in RUN mode to enter into parameter group.
- In parameter setting group, press the **MODE** key to move to other parameter in the group.
- Press the **MODE** key once after changing the setting value, to save the setting value and move to the next parameter.
- When entering to the parameter, press the **↵** key to move digit, **⏪** **⏩** keys to change the setting value.
- If there is no key input for 30 sec while setting SV or the parameters, the new settings are ignored, and the unit will return to RUN mode with previous settings.
- Hold the **MODE** key for 3 sec to save the setting value and return to RUN mode after changing the setting value.



Monitoring group

Display	Measuring range	Description	Unit	Factory default
I_n	0 to 100	Displays the present control input as percentage.	%	—
$L-u$ ^{※1}	0 to rated voltage range	Displays the present load voltage.	V	—
$L-R$ ^{※1}	0 to rated current range	Displays the present load current.	A	—
$L-P$ ^{※1}	0 to rated power range	Displays the present load power.	kW	—
$L-r$ ^{※1}	0 to 100	Displays the present resistance as percentage compared to the set resistance of full load auto recognition.	%	—
$t-nP$	0 to 100	Displays the present temperature of heatsink.	°C	—
$F-r$	50, 60	Displays the present frequency of power supply.	Hz	—

Load Output Formula

Type	Input	Display	Formula
Auto control (AUTO)	Current DC4-20mA	I_n	Load output [%] = Control input [%] × Output slope (5LP) [%]
	Voltage 1-5VDC	$I-5$	
	RS485 communication	Co	Load output [%] = RS485 [%]
Manual control (MAN)	Output limit	Inside adjuster	Load output [%] = Inside adjuster [%]
		Outside adjuster	Load output [%] = Outside adjuster [%]
		Inside/outside adjuster	Load output [%] = Inside adjuster [%] × Outside adjuster [%]

Comprehensive Device Management Program [DAQMaster]

DAQMaster is a comprehensive device management software for setting parameters and monitoring processes. DAQMaster can be downloaded from our website at www.autonics.com.

Item	Minimum specifications
System	IBM PC compatible computer with Pentium III or above
Operations	Windows 98/NT/XP/Vista/7/8/10
Memory	256MB+
Hard disk	1GB+ of available hard disk space
VGA	Resolution: 1024×768 or higher
Others	RS232C serial port (9-pin), USB port

User Manual for Communication

For the detail information and instructions, please refer to user manual for communication, and be sure to follow cautions written in the technical descriptions (catalog, homepage). Visit our homepage (www.autonics.com) to download manuals.


RS485 Communication Output

Applicable for models with RS485 communication output through option output (SPR1-□□T□□). Please refer to 'Ordering Information'.

1. Communication Specifications

Comm. protocol	Modbus RTU	Comm. speed	2400, 4800, 9600, 19200, 38400 bps
Connection method	RS485		
Application standard	Compliance with EIA RS485	Comm. response time	5 to 99ms (default: 20ms)
Max. connections	31 units (address: 1 to 99)	Start bit	1-bit (fixed)
Synchronization method	Asynchronous	Data bit	8-bit (fixed)
Comm. method	Two-wire half duplex	Parity bit	None, Even, Odd
Comm. distance	Max. 800m	Stop bit	1-bit, 2-bit

2. Application of system organization

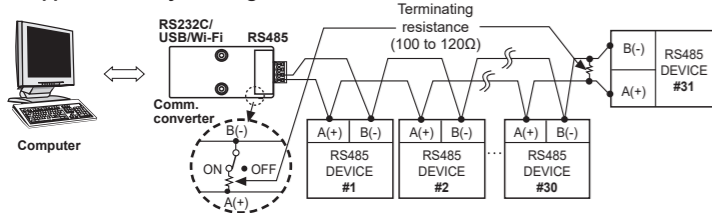

It is recommended to use Autonics communication converter, SCM-WF48 (Wi-Fi to RS485-USB wireless communication converter, sold separately), SCM-US48I (USB to RS485 converter, sold separately), SCM-38I (RS232C to RS485 converter, sold separately). Please use twisted pair wire, which is suitable for RS485 communication, for SCM-WF48, SCM-US48I and SCM-38I.

Parameter 1 group [PR1]

Display	Setting range	Description	Unit	Factory default
$S-t$	0 to 100	Set SOFT START time.	sec	3
$U-t$	0 to 100	Set SOFT UP time.	sec	3
$d-t$	0 to 100	Set SOFT DOWN time.	sec	3
$L-L$	$0 \leq L-L \leq H-L \leq 100$	Set the output low-limit value.	%	0
$H-L$		Set the output high-limit value.	%	100
SLP ^{※2}	0 to 100	In case of auto control (AUTO), set the output slope limit proportional to control input for limit load power.	%	100

Parameter 2 group [PR2]

Display	Setting range	Description	Unit	Factory default	
Inb ^{※2}	420	Set the control input specification.	—	420	
	$I-5$				
	512				
	onF				
	Co				
PR	PR	Set the control method.	—	PR	
	$u-F$ ^{※1}				
	$C-F$ ^{※1}				
	$u-F$ ^{※1}				
	$F-C$				
	$u-C$				
	onF				
	onF				
nAn ^{※2}	$I-r$	In case of manual control (MAN), set the output limit method.	—	$I-r$	
	$E-r$				
	$E-i$				
Inb ^{※2}	-99 to 99	Set the compensated input value for the offset between the actual input value and the measured input value.	%	00	
	$5Pn$ ^{※2}				Set the compensated input slope value between the actual input value 100% and the measured input value 100%.
$dI5$	In	Set the desired value to be displayed at the front display part.	—	In	
	$L-u$ ^{※1}				
	$L-R$ ^{※1}				
	$L-P$ ^{※1}				
oCu ^{※1}	0 to 120	Set the overcurrent alarm value.	%	120	
	0 to 100				
	0 to 120				
	0 to 100				
oUt ^{※1}	0 to 120	Set the overvoltage alarm value.	%	120	
	0 to 100				
	0 to 120				
	0 to 100				
$F-L$ ^{※1}	oFF / on	It executes 100% control output for 3 sec and the load resistance value recognized automatically as the initial set when the function is ON.	—	oFF	
HbU ^{※1}	oFF / 10 to 100	Set the heater break alarm value.	%	10	
Rdr ^{※3}	01 to 99	Assign the unique address when communicating.	—	01	
bPS ^{※3}	24, 48, 96, 192, 384	Set the speed of data transmission. Multiply by 100 to read the set value. (e.g.: 96=9600bps)	bps	96	
Prb ^{※3}	non / EUE / odd	A parity bit is a data communication method that adds an additional bit to each character in transmitted data as an indicator used to verify data loss and corruption.	—	non	
SbP ^{※1}	1, 2	Set the number of bits to mark the end of a transmitted data string.	bit	2	
	rUt ^{※3}				5 to 99
EnP ^{※3}	EnP	Enable or disable the setting of parameters stored in memory via communication from the master system (PC, PLC, etc.). Reading the set value in parameter is always possible.	—	EnP	
	dSP				Disable
LoC	oFF	The parameter group settings can not be changed when the function is ON.	—	oFF	
	LCl				$PR1$ lock
	$Lc2$				$PR2$ lock
ini	no / $YE5$	If set the parameter to YES, reset all parameters to default. Hold the ⏪ ⏩ keys for 5 sec, to enter parameter reset parameter.	—	no	

※1: Displayed only for feedback control models.

※2: Set the below parameters available depends on the control input.


Type	Input	Display	Input correction [nb]	Input slope correction [SPn]	Output slope [SLP]	Monitoring value [In]
Auto control (AUTO)	Current	DC4-20mA	420	\circ	\circ	\circ
	Voltage	1-5VDC	$I-5$	\circ	\circ	\circ
	pulse voltage	5-12VDC	512	\times	\times	\circ
	No-voltage	ON/OFF contact	onF	\times	\times	\circ
	RS485 communication		Co	\times	\times	\times
Manual control (MAN)	Output limit	Inside adjuster	$I-r$	\times	\times	\times
		Outside adjuster	$E-r$	\times	\times	\times
		Inside/outside adjuster	$E-i$	\times	\times	\times

※3: Displayed only for models with RS485 comm. output.

Functions


Output limit (OUT ADJ)

This function will be [Control input (%) × OUT ADJ (%) = Output] and it controls the power supplied into the load. Although control input is 100% (5V or 20mA), the output is the 50% which is proportioned with OUT ADJ. This function can not be used for ON/OFF control method.

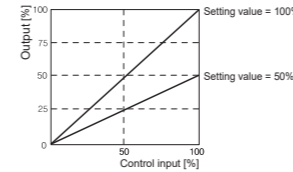


Output high limit/low limit value [H-L / L-L]

This function is to limit output range to protect load.

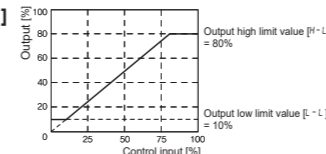


SOFT START [S-t]

When the power is supplied, this function is able to protect the load when it controls load (molybdenum, white gold, infrared lamp) with inrush current or the width of rising temperature in big (SV is big). SOFT START set time (T) is the required time that output reaches to 100%, and it is differentiated by OUT ADJ set value. This function can not be used for ON/OFF control method.

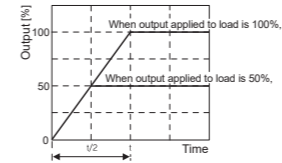

SOFT UP/DOWN [U-t / d-t]


Unlike SOFT START which operates only once at supplying power, this function protects load from the inrush current in the RUN mode. When reached to the target output value, operation stops. This function can not be used for ON/OFF control method.

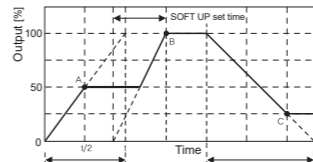

Input correction [Inb]

It compensates the offset between actual input value and measured input value.


(E.g.) When input monitoring value is 5% at 4mA in DC4-20mA control input, setting Inb to -5 calibrates the input monitoring value to 0%.

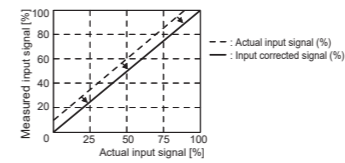

Input slope correction [SPn]

It compensates the gain of the measured 100% input for actual 100% input value.

(E.g.) When the input monitoring value is 99% at 4mA in DC4-20mA control input, setting $5Pn$ to 1 calibrates the input monitoring value to 100%.

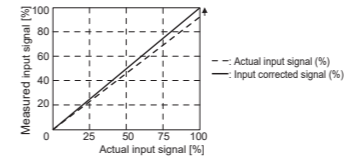

RUN/STOP switching

RUN/STOP status of the power controller can be switched with the external RUN/STOP contact. In the RUN mode, the operation indicator on the front turns on.



AUTO/MANUAL selection

Operation mode (auto control/manual control) of the power controller can be selected with the external AUTO/MAN contact. In the manual control mode, the manual control indicator on the front turns on.



RESET

In the event of system anomalies and alarms, RESET input restarts the power controller. (Parameters are not initialized.) Or, hold the **⏪** **⏩** keys for 2 sec, to operate RESET.



Alarm

Type	Display	Operation	Output	Clear alarm
SCR error alarm ^{※1}	Scr	1		
Overcurrent alarm ^{※1}	$o-C$	2		
Heatsink overheat alarm	tEn	4	• Output stops. (SCR OFF)	• Re-supply the power • RESET • Switch to STOP mode
Overvoltage alarm ^{※1}	$o-u$	5		
Fuse break alarm	FUS	3		
Frequency error alarm ^{※2}	$F-r$	6		• Automatically cleared when returning within the setting range
Heater break alarm ^{※1}	$H-b$	7		• Continues operation

※1: This is only for feedback control models. ※2: This is only for normal control models.

※When several alarms occur at same time, the highest priority error is displayed based on priority.

1) SCR error alarm

Even though output is 0%, if the current of 10% or more of the rated load current flows for over 3 sec continuously, SCR error alarm occurs.

2) Overcurrent alarm

This function protects the load from overcurrent. If the current flows over the overcurrent alarm setting value [oCu] and setting delay time [oCt], overcurrent alarm occurs.

3) Heatsink overheat alarm

When the temperature of a heatsink is over 85°C, heatsink overheat alarm occurs.

4) Overvoltage alarm

This function protects the load from overvoltage. If the current flows over the overvoltage alarm setting value [ouu] and setting delay time [out], overvoltage alarm occurs.

5) Fuse break alarm

When braking fuse, not supplying load power, breaking load (single load), fuse brake alarm occurs.

6) Frequency error alarm

When the load power frequency is out of the specification, frequency error alarm occurs.


7) Heater break alarm

Comparing the full load resistance value and the current load resistance value, if the current load resistivity is maintained under the setting value [HbU] for over 3 sec continuously, heater break alarm occurs. This alarm operates when control output is over 10% and load current is over 10% of the rated current. Output does not stop and operates normally.


$$\text{Current load resistivity}(\%) = \frac{\text{Full load resistance value}}{\text{Current load resistance value}} \times 100$$

Derating Curve


Rated load current 25A

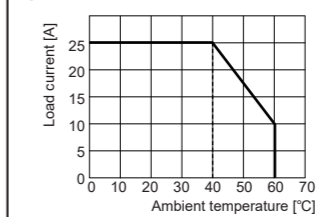


Rated load current 35A

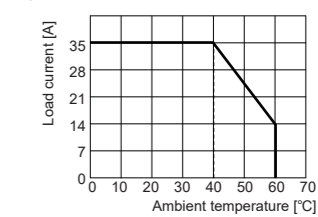


Rated load current 50A

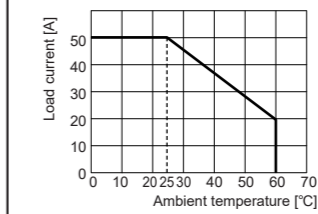


Rated load current 70A

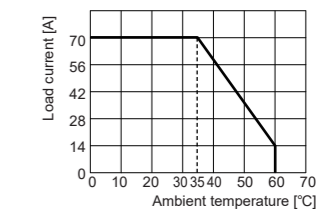

Rated load current 100A

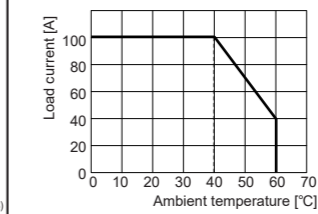

Rated load current 150A

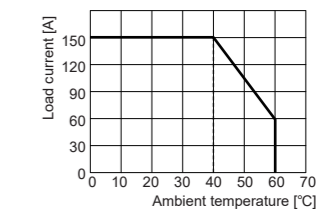

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Use the product, after 3 sec of supplying power.
- Before use, set the mode and function according to the specification. Especially, be cautious that the product does not operate when OUT ADJ. is set to 0%. Since changing the mode/parameter during operation may result in malfunction, set the mode and function after disconnecting load output.
- Re-supply the power to the unit after the unit is discharged completely. Failure to follow this instruction may result in malfunction.
- To ensure the reliability of the product, install the product on the panel or metal surface vertically to the ground.
- Install the unit in the well ventilated place.
- While supplying power to the load or right after turning off the power of the load, do not touch the body and heat sink. Failure to follow this instruction may result in a burn due to the high temperature.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not wire to terminals which are not used.
- Since inter element can be damaged when using with coil load, inductive load, etc., the inrush current must be under the rated load current.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.

- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000m
- Pollution degree 2
- Installation category III