



F&F Filipowski sp. j.
Konstantynowska 79/81 95-200 Pabianice
tel/fax +48 42 2152383; 2270971 POLAND
http://www.fif.com.pl e-mail: fif@fif.com.pl

**GSM REMOTE CONTROL
RELAY**

**Simply MAX
P01**


WARRANTY. The F&F products are covered by the 24 months warranty from date of purchase. Effective only with proof of purchase. Contact your dealer or directly from us. For more information on the procedures for filing complaints on www.fif.com.pl/reklamacje



Do not dispose of this device in the trash along with other waste! According to the Law on Waste, electro coming from households free of charge and can give any amount to up to that end point of collection, as well as to store the occasion of the purchase of new equipment (in accordance with the principle of old-for-new, regardless of brand). Electro thrown in the trash or abandoned in nature, pose a threat to the environment and human health.

PURPOSE

P01 relay with built-in GSM communicator is used to remote control via mobile phone. It allows an easy way to manage and monitor outputs status devices connected to the inputs and outputs of the relay.

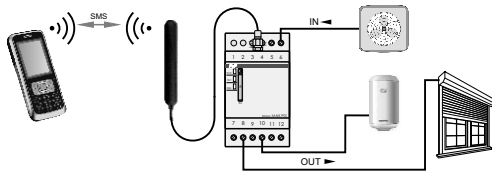

SMS ALERTS ON MOBILE ABOUT ACTUATION OF INPUT

- IN1 ON - high state (voltage) Input 1
- IN1 OFF - low state (no voltage) Input 1
- IN2 ON - high state (voltage) Input 2
- IN2 OFF - low state (no voltage) Input 2

REQUEST ABOUT STATE OF ENTRY AND EXIT

- IN1? - query about the state of the input 1(ans: IN1 ON / IN1 OFF)
- IN2? - query about the state of the input 2(ans: IN2 ON / IN2 OFF)
- OUT1? - query about the state of output 1(ans: OUT1 ON / OUT1 OFF)
- OUT2? - query about the state of output 2 (ans: OUT2 ON / OUT2 OFF)

PASSWORD (4-8 digits)

If you are working with a password option command must precede password, eg 1234 OUT1 ON.

SMS configuration commands:

- PASS ON - with this option with password
- PASS OFF - disable the password
- PASS ON [xxxxxxx] - set or change the password
- [xxxxxxx] - Enter the number of passwords, e.g. 12345678

INPUTS CONFIGURATION


Set the phone number to which you want to send the message.

- IN1! [xxxxxxxx] ON - notification fixed phonenumber with high (voltage) Input no. 1
- IN1! [xxxxxxxx] OFF - notice the fixed phonenumber at a low state (no voltage) on the input no. 1
- IN1! [xxxxxxxx] NF - notice the fixed phonenumber about low and high status of input no 1
- IN2! [xxxxxxxx] ON - notification fixed phonenumber with high (voltage) Input no. 2
- IN2! [xxxxxxxx] OFF - notice the fixed phonenumber at a low state (no voltage) on the input 2
- IN2! [xxxxxxxx] NF - notice the fixed phonenumber about low and high status of input no 2
- [xxxxxxxx] - provide a phone number with a prefix, such as +48123456789

FUNCTIONING

Relay can operate with any GSM 900/1800 mobile operator (no simlock). In order to operate properly valid SIM card have to be inserted. The relay has two relay outputs for switching ON/OFF of controlled receivers and two high voltage inputs for messages about state changing of controlled receivers. All commands, responses and alerts exchange between mobile phone and relay is carried out using SMS messages.

I/O DESCRIPTION

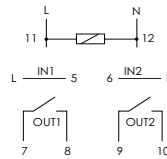

- 5 input no. 1
- 6 input no. 2
- 7-8 output no.1 (separated contact)
- 9-10 output no. 2 (separated contact)
- 11-12 supply

COMMANDS AND MESSAGES

SETTING PERMANENT OUTPUTS STATES

- OUT1 ON - switch ON output 1
- OUT2 ON - switch ON output 2
- OUT1 OFF - switch OFF output 1
- OUT2 OFF - switch OFF output 2

TEMPORARY SWITCHING of OUTPUT

- OUT1 ON S [x] - temporary switching output 1 at time x, where x is in the range 1 ÷ 300sec
- OUT2 ON S [x] - output switch no.2 time to time x, where x is in the range 1 ÷ 300sec
- OUT1 ON M [x] - temporary switching output 1 at time x, where x is in the range 1 ÷ 600min
- OUT2 ON M [x] - temporary switching output 1 at time x, where x is in the range 1 ÷ 600min

Example:
OUT1ON S 30 - switching output 1 time for 30 seconds.
OUTON M10 - switching out one time for 10 minutes.

AUTOMATIC REPLY

The optional auto-reply on the phone the user with a message that reaches and adoption of SMS.

ANSW - request an automatic response. The word served after the main command. the answer is and confirmation of the status of inputs, outputs and functions.

- Example
- Command: OUT2ON ANSW. Content response: OK OUT2 ON
- Command: PASSON 1234 ANSW. Content response: OK PASS ON 1234
- Command: IN1!+48123456789 ANSW. Content response: OK IN1!+48123456789

REDEFINITION OF INPUTS, OUTPUTS AND STATES NAMES

In order to simplify SMS messages used in communication with relay user can add own names for all inputs, outputs and states.

Request for input or output state we create by adding to the defined name of a question mark "?".

Furthermore only ON and OFF commands will be accepted even if other names for states were set.

- Redefinitions of names used in SMS Messages:
- TEXT! IN1 <input1_name> <state_ON> <state_OFF>
- TEXT! IN2 <input2_name> <state_ON> <state_OFF>
- TEXT! OUT1 <output1_name> <state_ON> <state_OFF>
- TEXT! OUT2 <output2_name> <state_ON> <state_OFF>

Alternative names can be 10 characters long and cannot have spaces.

- Examples
- INPUT 1
- Definition: TEXT! IN1 GATE OPEN CLOSE
- Question: GATE?
- Answer: GATE OPEN
- OUTPUT 2
- Definition: TEXT! OUT1 pump_2 turnedON turnedOFF
- Question: pump?
- Answer: pump turnedOFF
- Comments: pump_2 ON

Warning! Note that even if user redefine names relay will accept default commands.

AUTOMATIC REPLY

The optional auto-reply on the phone the user with a message that reaches and adoption of SMS.

ANSW - request an automatic response. The word served after the main command. the answer is and confirmation of the status of inputs, outputs and functions.

example

Command: OUT2 ON ANS. Content response: OK OUT2 ON

Command: PASS ON 1234 ANSW. Content response: OK PASS ON 1234

Command: IN11 +48123456789 ANSW. Content response: OK IN11 +48123456789

STATUS SIM CARD [USSD]

Execution of maintenance tasks, such as activation and deactivation of services, check the status and recharge of account, etc., using the operator service USSD (Unstructured Supplementary Service Data).

USSD? <USSD_code>

In response to a user's phone will come SMS with the response operator, which would be consistent with the information given USSD command, such as the current charge state and the expiry date (the content and format of the notification depends on the operator).

Example

USSD? *111#

state and the expiry date

USSD? *123*12345678909876#

recharge of account

Above there are examples of commands USSD codes. In fact, they are determined individually by mobile network operators.

MEMORY OF OUTPUT

Automatic restoration the status of outputs after the disappearance and when power is restored (restart).

MEMORY ON - on the option.

MEMORY ON - disable option.

CONFIGURATION PARAMETERS

Obtaining configuration information via SMS commands for phone user.


CONFIG? - query about configuration parameters example:

2. Communication signals by the number of LED flashes STAT: 0.5s with period 6s (1 blink - SMS input, two blinks -SMS output, three blinks - error SMS output, 6 blinks- Voice connection)


* STAT is off, GSM off - GSM module is not working. Suspension of work function or permanent fault. Make a restart of controller.

WIRING DIAGRAM

Example of connecting the input signal to the input no 1 (joint 5) for the notification of activation.

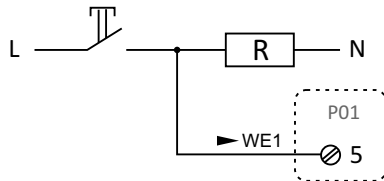

Example of connecting the receiver to the controlled output 1 for the remote control.

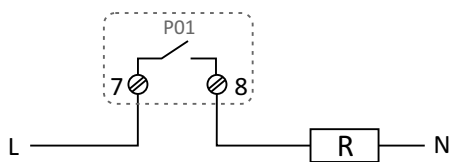

Example

CONFIG:

IN1 +48123456789 NF

IN2 +48987654321 ON

MEMORY OFF

PASS ON 1234

LANGUAGE

The option to select the language for automatic SMS notification.

LANG EN - english

NOTATION

Relay recognizes commands in lowercase and uppercase letters. Also in the case of mixed character command.

Example

Proper record of commands: OUT1ON/out1on/Out1oN

Between the command words combined to put a space. The otherwise, the command will be confusing for the relay and will be ignored.

Example

OUT1ON_M_10 -correctly

OUT1ON_M10 -incorrectly

_ - space

LED INDICATION

* U - switched power relay

* STAT blink 0.5s with period 0,1s, GSM off - there is no cardSIM

* STAT flashes 0.25s with period of 0.5s, GSM off - no SIM cardlogs on to the network operator. With an active SIM card with a PIN code.

Deactivate the PIN code for the SIM card used.

* STAT flashes 0.5s with period of 1.0s, GSM lights on - searchGSM network.

* STAT lights on / flashing, GSM blinking - Normal operation:

1. Signalling power range by the number of LED flashes GSM: 0.15s with period 6s (from 1 to 5 flashes)

ASSEMBLY AND CONNECTION

1 Turn off the power.

2 Put the relay on the rail in the switchboard.

3 Connect the power supply to the relay: L to terminal 11; N to terminal 12

4 Screw the supplied antenna to the transmitter and attach it to the ground outside the switchgear, the site of GSM.

5 In place of the SIM port thin tool (eg a screwdriver)press the yellow button. Remove the tray, load the SIM card and inserted into the port.

6 Connect the receiver and control input signals in accordance with the description of the I / O connections and examples of implementation.

7 Switch on the power supply.

TECHNICAL DATA

supply	230V AC
inputs	
number	2
voltage tolerance	160÷260V AC
relay outputs	
number	2
type	1NO
nominal voltage	230V AC
current load	<8A
ports	SIM
power consumption	
standby mode	1,3W
with GSM communication	<3W
working temperature	-10÷50°C
connection	screw terminals
dimensions	3 modules (52mm)
fixing	on the rail TH-35
GSM antenna	connector SMA / dim. 20x100mm / lenght 2,5m

SWVER.01.06
D131121/131127